



aura-t™ - Installation Guide

Changing an aura-t™ from being Integral to Remote
Kit Code: XX3622

Front Panel Removal

1. ISOLATE the unit from mains power supply and allow sufficient time for all moving parts to stop
2. Loosen the two corner screws located on the bottom front of the unit
3. Completely remove the centre screw
4. Completely remove the front panel by pulling it away from the unit at the bottom and lifting


Panel replacement is the reverse of the above steps. Ensure it is securely located at the top before tightening screws.

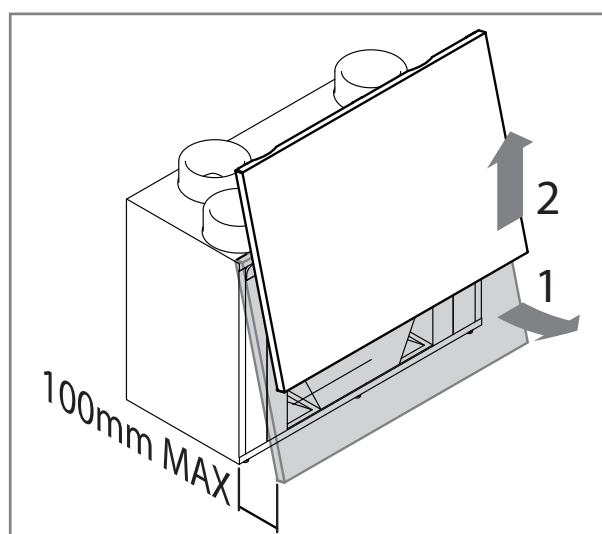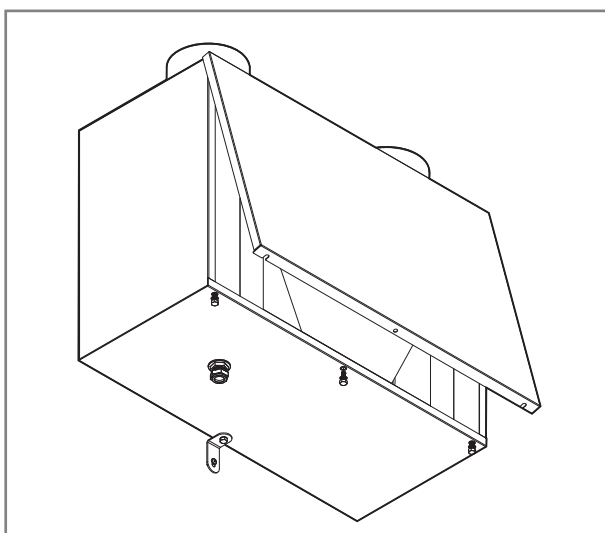

Remove aura-t™ from EPP housing

Once removed, disconnect the red, white, yellow and black cables from the aura-t™.

Place these cables into a terminal block or tape the ends together, leaving them in the void left by the aura-t™.

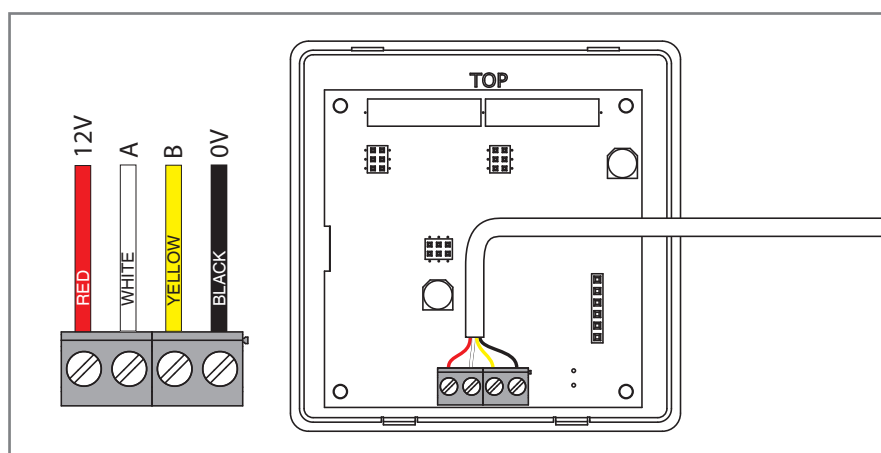




Place the blanking plate where the aura-t™ has been removed from.

Fold must run horizontally as shown.



Refit the front panel

Remove the front cover from the wiring box as shown below to expose the control PCB.


Remove the red, white, yellow and black cables from the control PCB terminals. Place these cables into a terminal block or tape the ends to prevent the bare cables touching, leaving them safely away from the PCB.

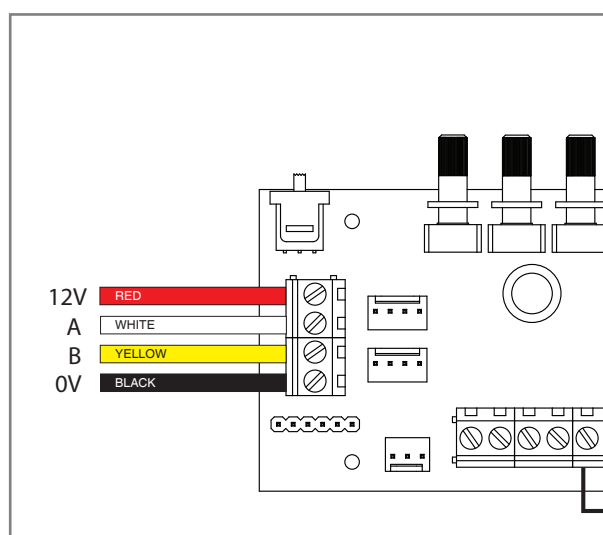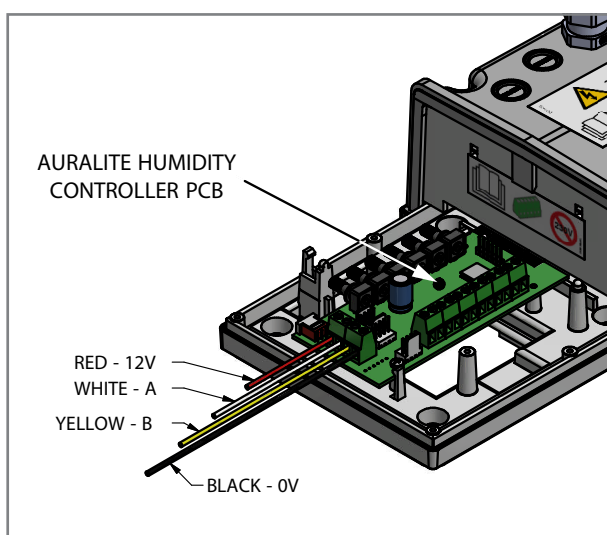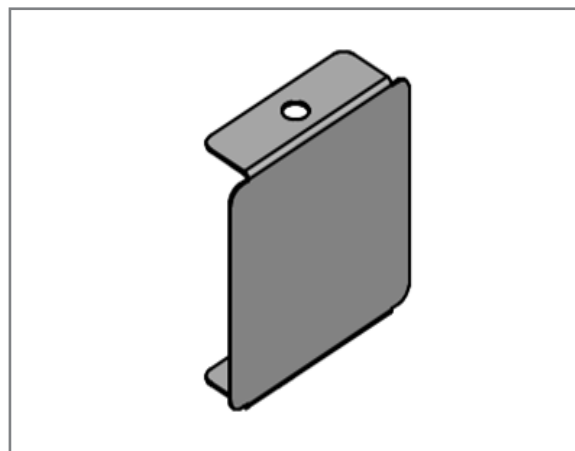


Remove the rear cover of the wiring box and knock out one of the gland holes. Fit the new connector lead to the cover.

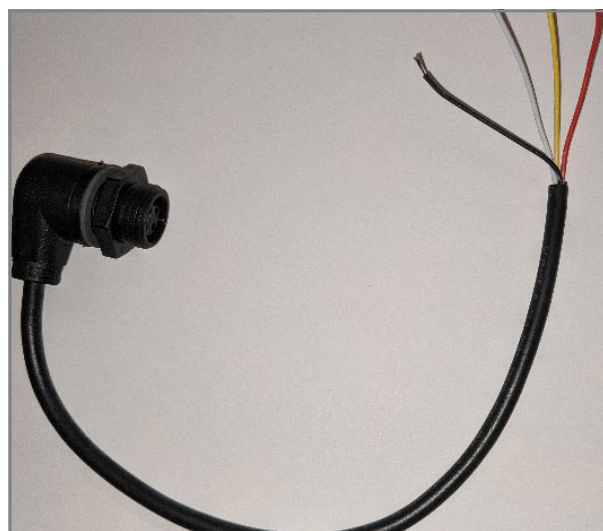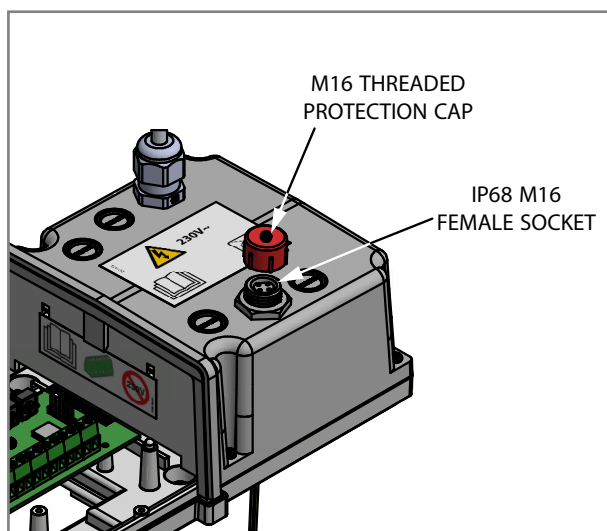

Attach the flying lead end of the connector lead to the Control PCB. Re fit both top covers.

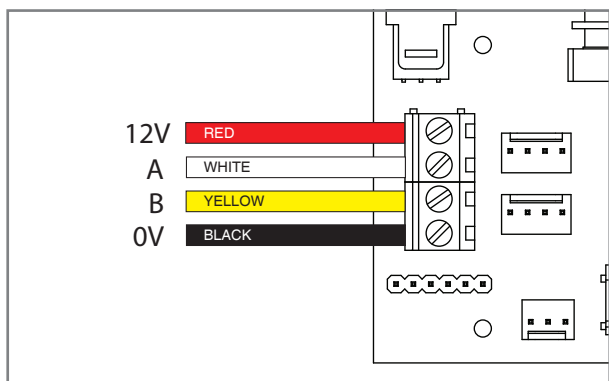

The aura-t™ can now be positioned where required. Terminate one end of the supplied 3 metre cable to the aura-t™ as below and plug the other end into the new socket on the unit. This can be extended up to 30 metres using additional extension cable.

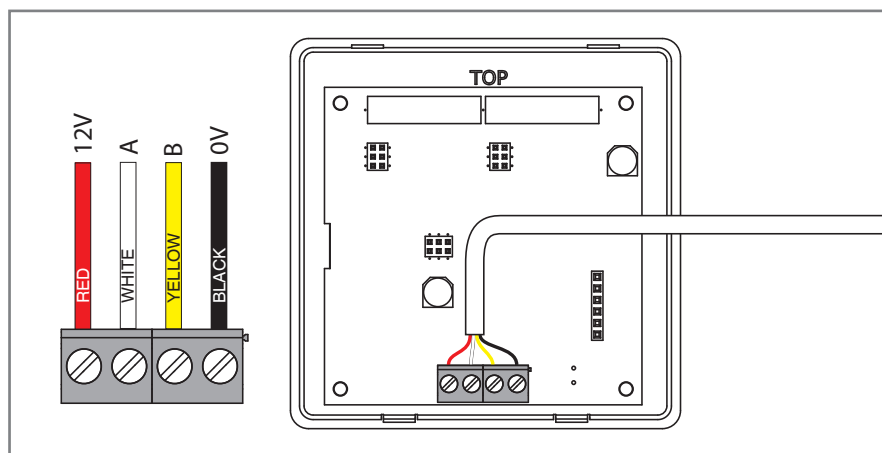

Contact Information

Sales Support



0800 970 4190



ventsales@titon.co.uk

Systems Design



01206 713800



ventsystems@titon.co.uk

Technical Support



07831 308288



venttech@titon.co.uk

Head Office - Sales & Marketing

894 The Crescent, Colchester Business Park,
Colchester, Essex, CO4 9YQ

Manufacturing, Despatch - Haverhill

Falconer Road, Haverhill, Suffolk, CB9 7XU