


Can Be Fitted Either End Of Ventilator Left Hand Illustrated

Rod Control Pack (TA18003): Includes 1 x Cord cap (left hand), 1 x Cord cap (right hand), 1 x Acorn, 1 x Rod 600mm and 3m Cord


Rod Control Pack (TA18003): Includes 1 x Cord cap (left hand), 1 x Cord cap (right hand), 1 x Acorn, 1 x Rod 1000mm and 3m Cord

Stage 1



Tie knot in one end of cord, leaving a short tail. Slide acorn along cord until over knot. Slide cord into rod as above.


Stage 2

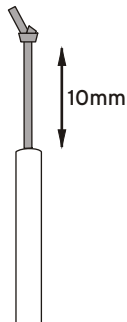

Tie another knot at other end of cord leaving approx 10mm of cord between knot and rod.


NB Trim Excess Cord

Stage 3

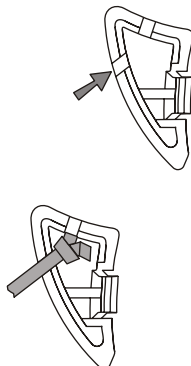


Insert knot (at rod end) into correct cord cap (right hand or left hand), ensuring a short tail of cord is hidden in cap.

Stage 4

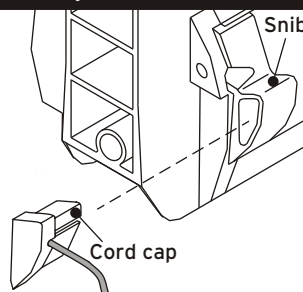

Press cord cap into recess in corresponding snib.

Stage 5

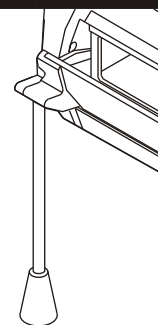

Check operation. Fit spare cord cap to opposite snib.

MARKETING DIVISION

International House, Peartree Road, Stanway, Colchester, Essex CO3 0JL

Tel: +44 (0) 1206 713800 Fax: +44 (0) 1206 543126 Web: www.titon.com