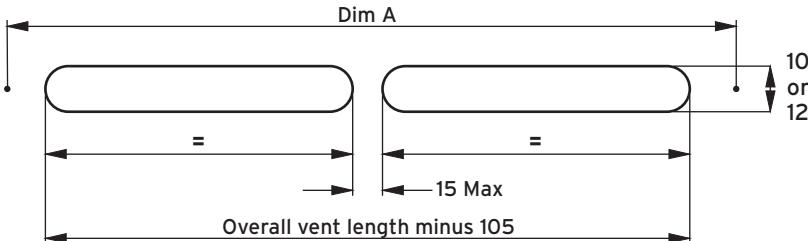
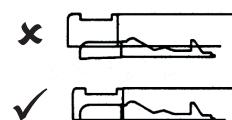

Figure 1


Dim. A: Vent = Overall Vent length minus 28
 Canopy = Overall Canopy length minus 15


1. Prepare slots and fixing holes, avoiding glazing rebates and reinforcement (See Figure 1).
2. Fix vent and insert screw covers. Ensure vent is fully closed before fixing (See Figure 2).
3. Fix canopy centre clip and clip on canopy (See Figure 3).
4. Open canopy screw covers and fix canopy. Close screw covers.

We recommend the use of a good quality silicone sealant along the canopy sealant groove.

Recommended fixing screws: No.6 pan head, self tapping.

Figure 2


Ensure Vent is fully closed before fixing.

Figure 3


Clip Canopy onto centre clip

EA = Equivalent Area.

All dimensions in mm unless otherwise stated.

* Any significant variation of the applications shown will affect the EA performance of the product combination.
 Tested in accordance with BS:EN 13141-1 (2004).