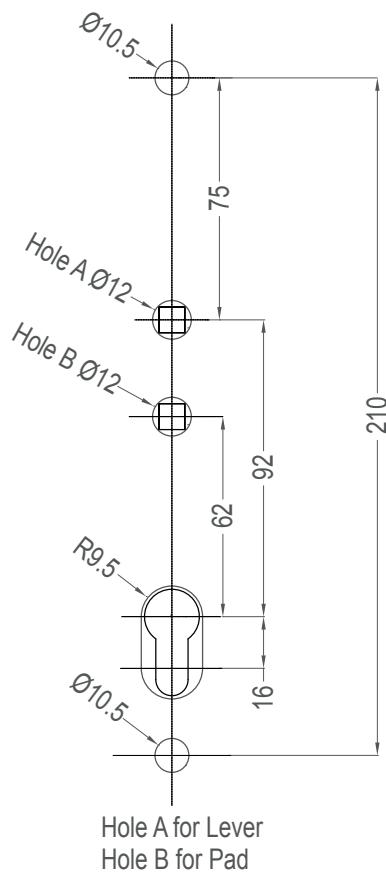


### Diagram



Routing / Drilling Detail

### Fixing Instructions

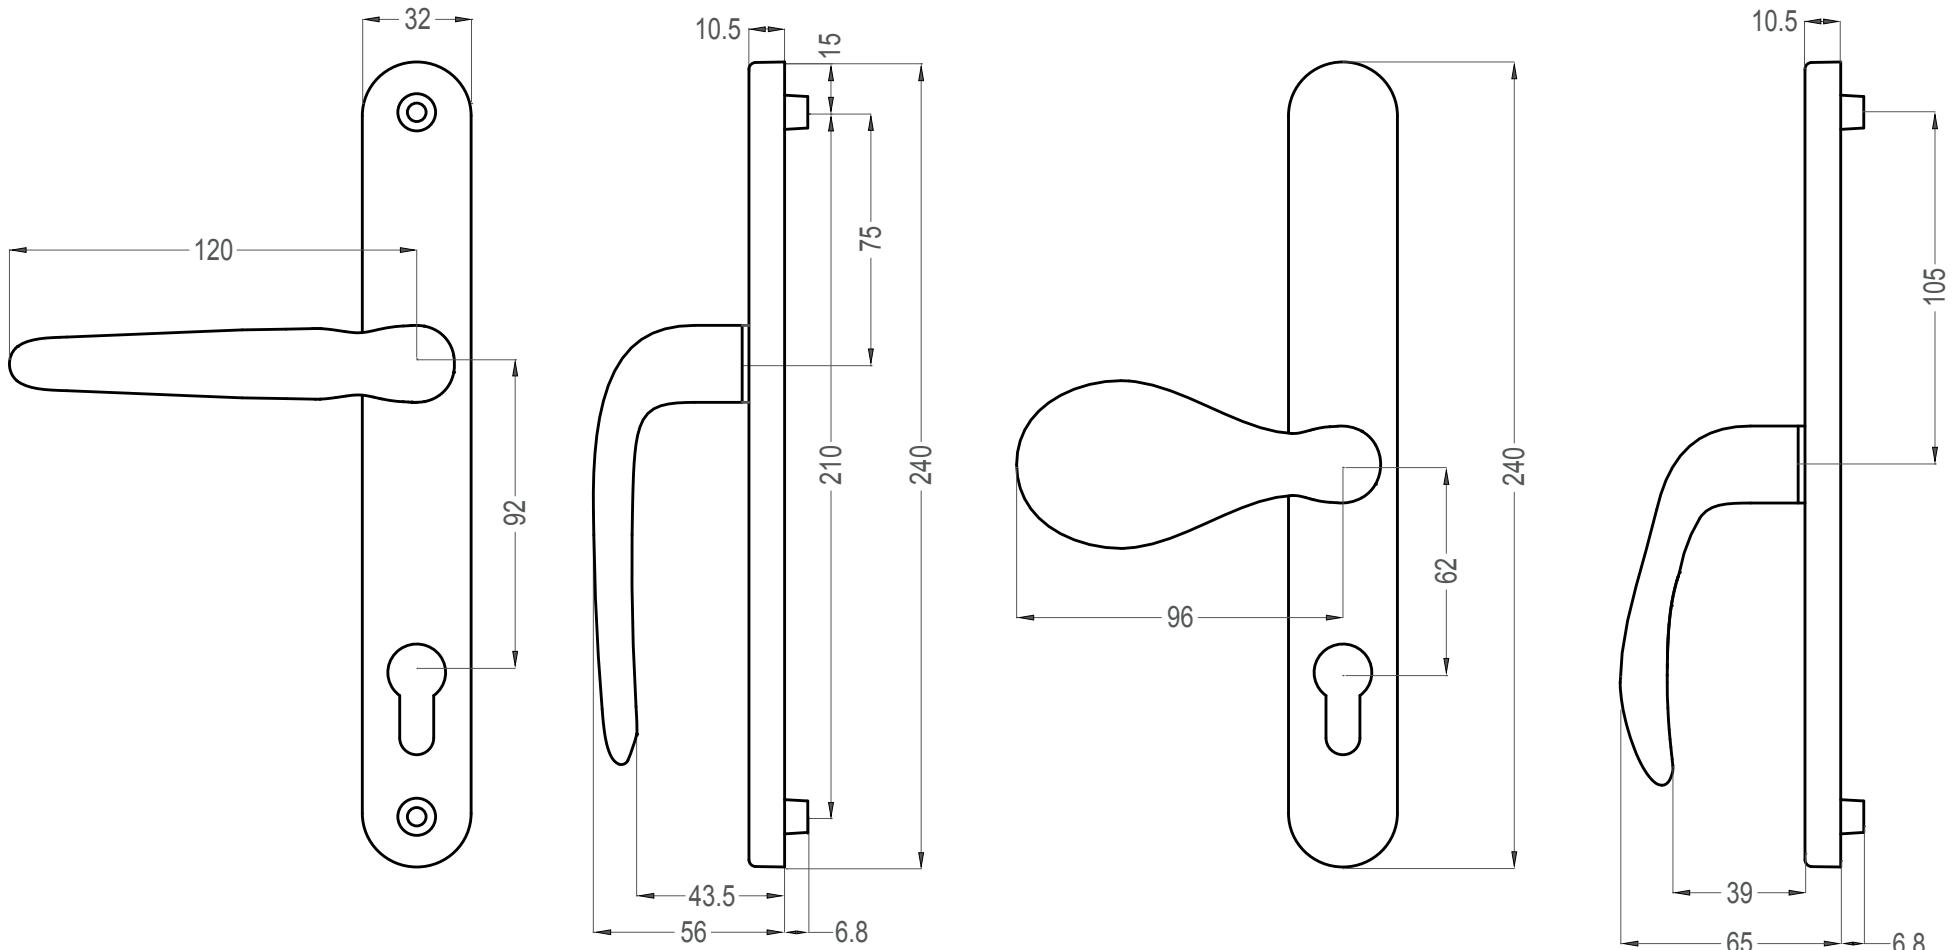
1. Rout / drill door.
2. Cut screws (M5) and spindles (8mm Square) to length if necessary.
3. Place spindles in position
4. Place both handles into position and insert fixing screws, leaving loose.
5. Fit Euro cylinder and tighten handle fixing screws, do not over tighten.

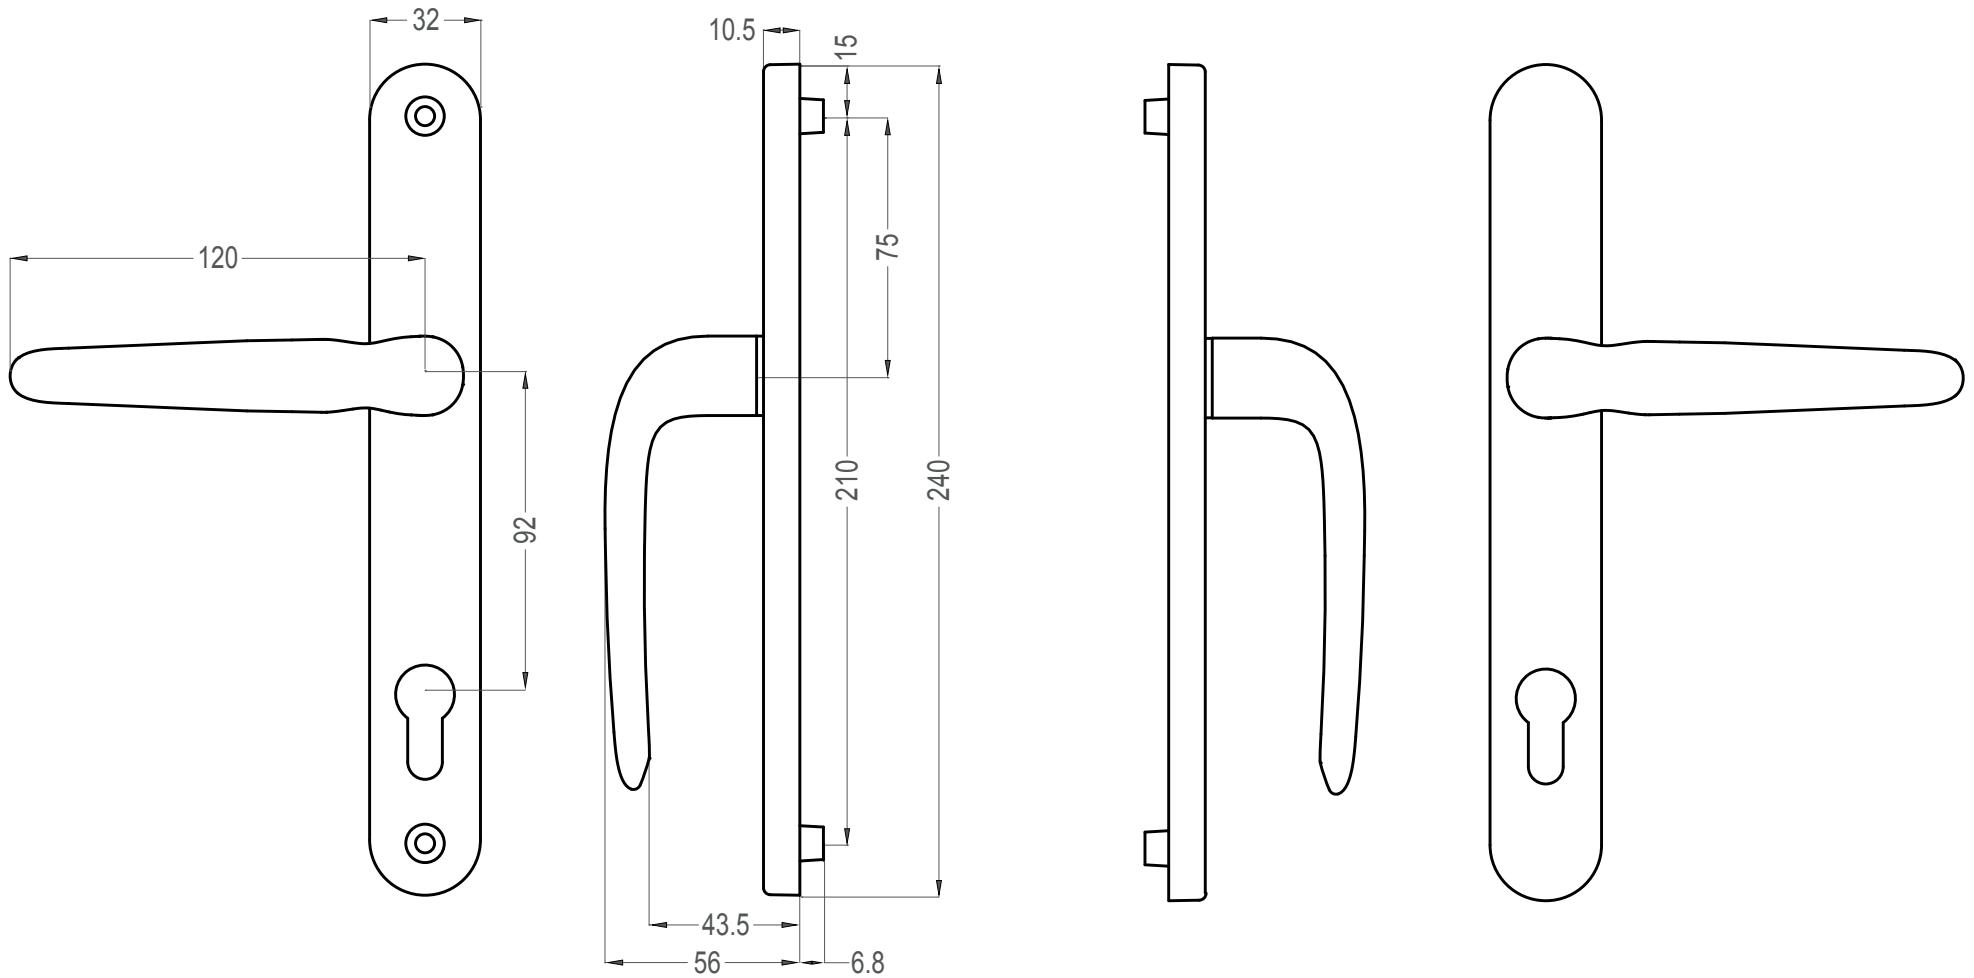
### Cleaning

Door handles should only be cleaned using warm soapy water and a soft cloth.

Do not clean any part with solvents or abrasive substances.

*Failure to adhere to these instructions invalidates your Titon Product Guarantee.  
Paint or corrosion not covered by Guarantee.*

**Diagram**Lever/Pad

**Diagram****Lever/Lever**