



Fitting Instructions

0115 Mega Egress Hinge

Part Numbers:

0115-2013-E-135 - 13.5mm Stack Height

0115-2013-E-165 - 16.5mm Stack Height

Features:

90° Opening - Throws Sash outside Frame





Easy Clean operation

Heavy Duty


(40KG max. sash weight - 900mm max. sash width)




Dimensional Data:

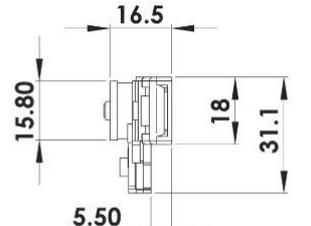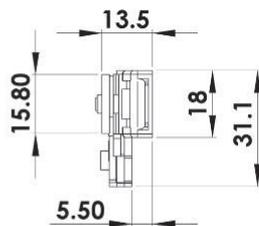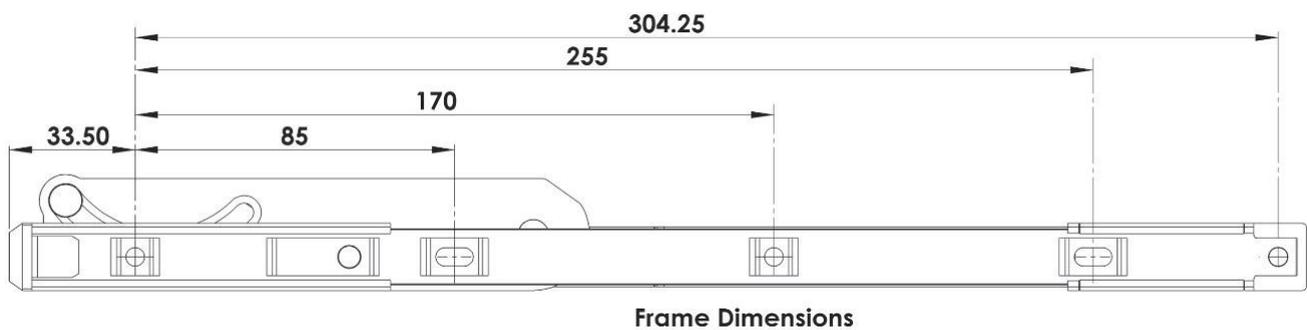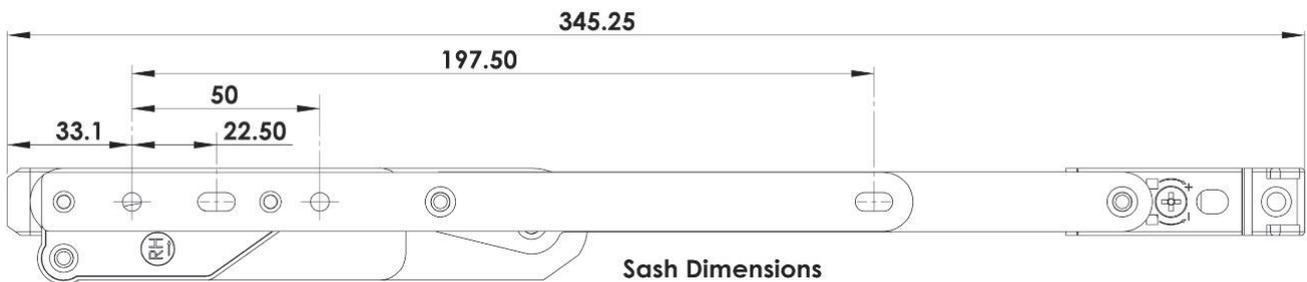


Fitting to Frame:

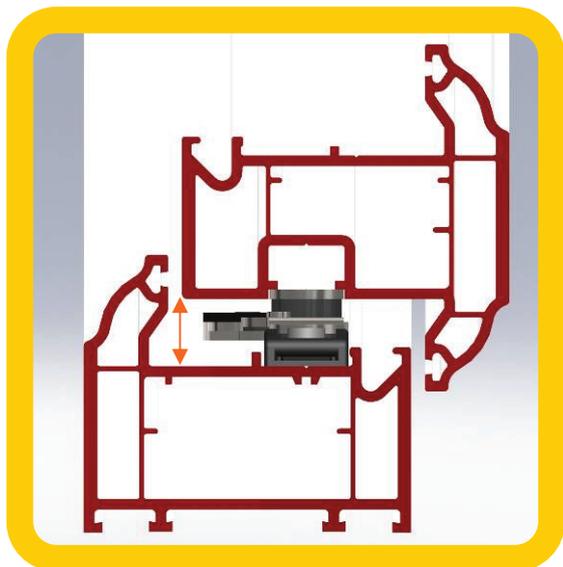


Typical fit into UPVC profile
Available stack heights: 13.5 and 16.5mm

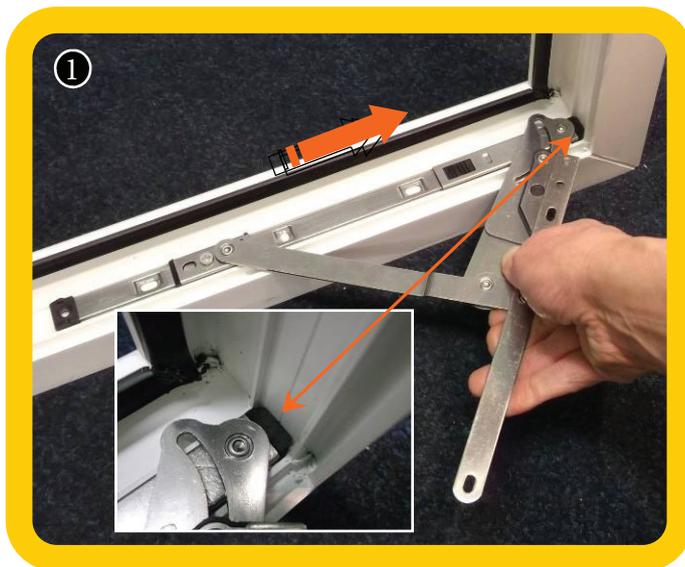


1 Place hinge onto Frame and push head of hinge into corner as shown

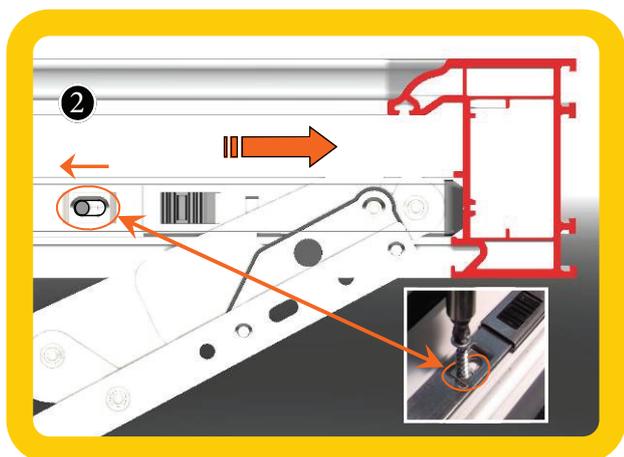


2 Insert suitable screws into 2 slots at end of slot furthest from head of hinge as shown

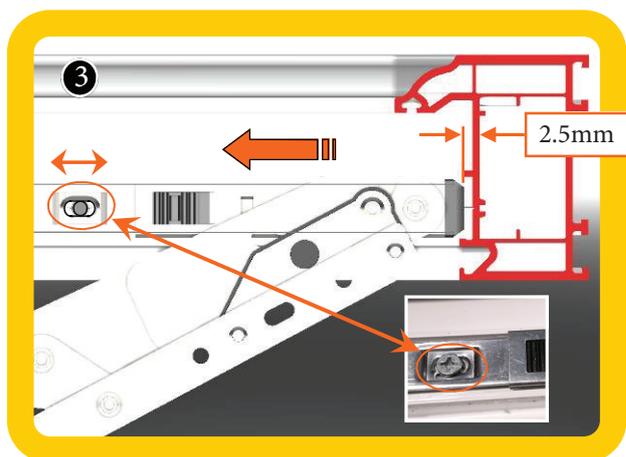

3 Slide hinge out so that screw is in centre of slot leaving 2.5mm for adjustment if required

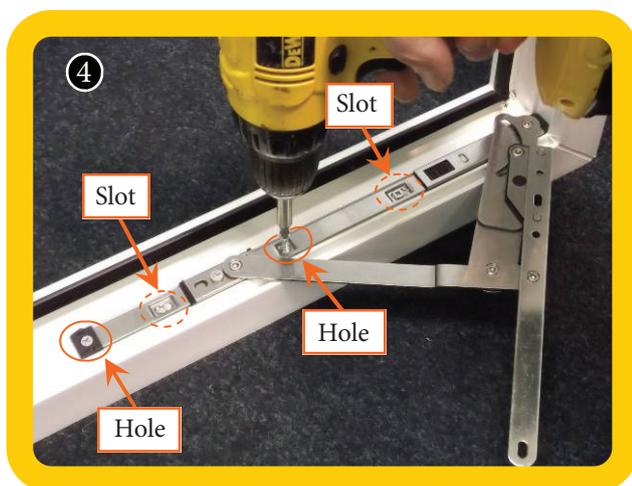


4 Insert suitable screws into 2 holes as shown

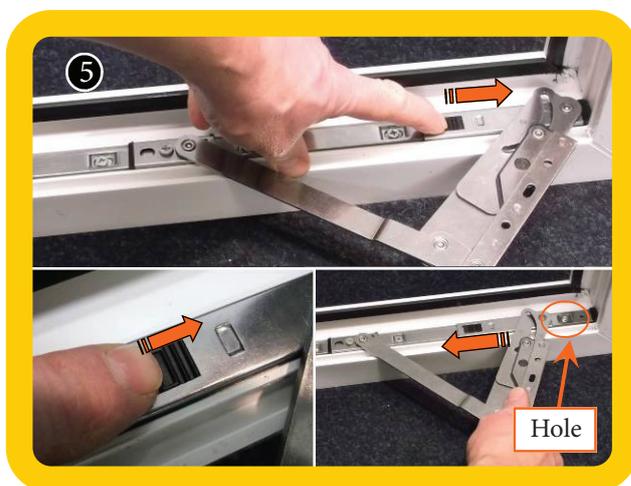


5 Slide "Easy Clean" activation button and move Top Slider until final screw position is exposed and insert screw


Fitting to Sash:

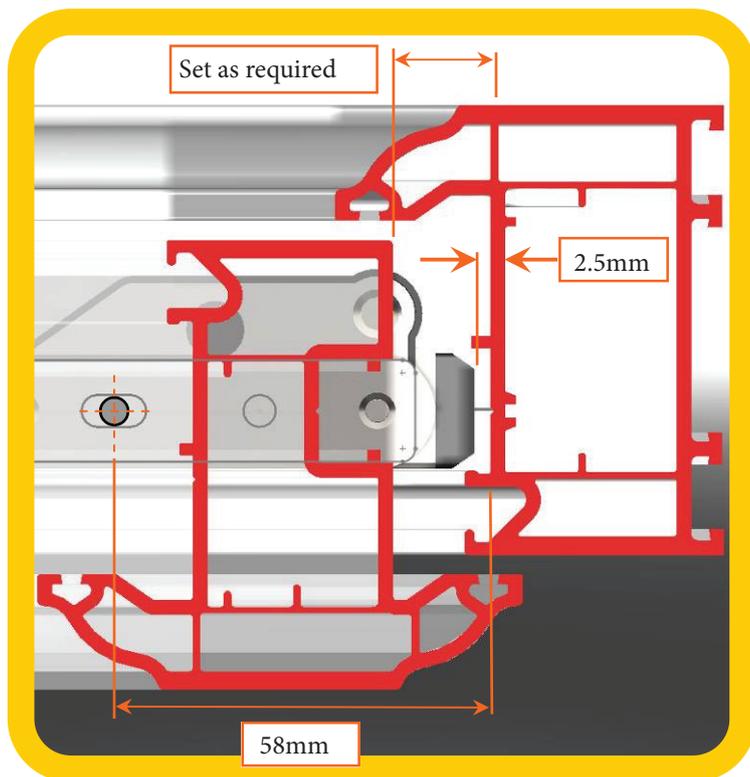

58mm is the distance from Frame to the middle of first slot on Sash.

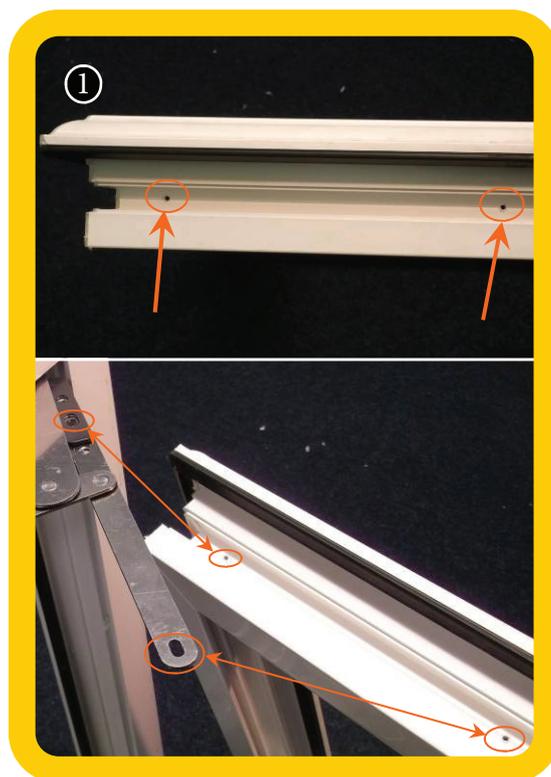

It is recommended that pilot holes are pre drilled at the 2 Slot positions on Sash

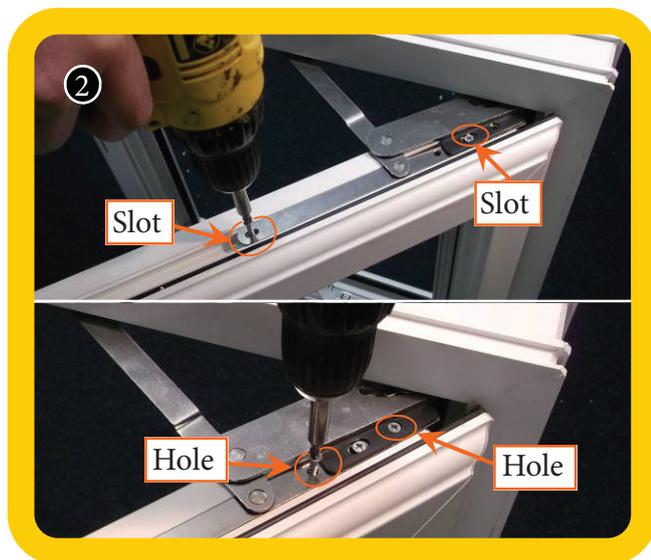

Insert suitable screw into the 2 slots, make adjustments to Sash position if required. then insert screw into the 2 holes



To activate the "Easy Clean" mode push both black slide buttons (top and bottom) towards the corner and slide the Sash away from the corner