



ITEM NO.	DESCRIPTION	QTY.
1	SHOOTBOLT CORNER ASSEMBLY	2
2	SHOOTBOLT CONNECTOR	2
3	SHOOTBOLT COVERPLATE	2
4	M4 x 6 Raised Csk Hd Screw	2

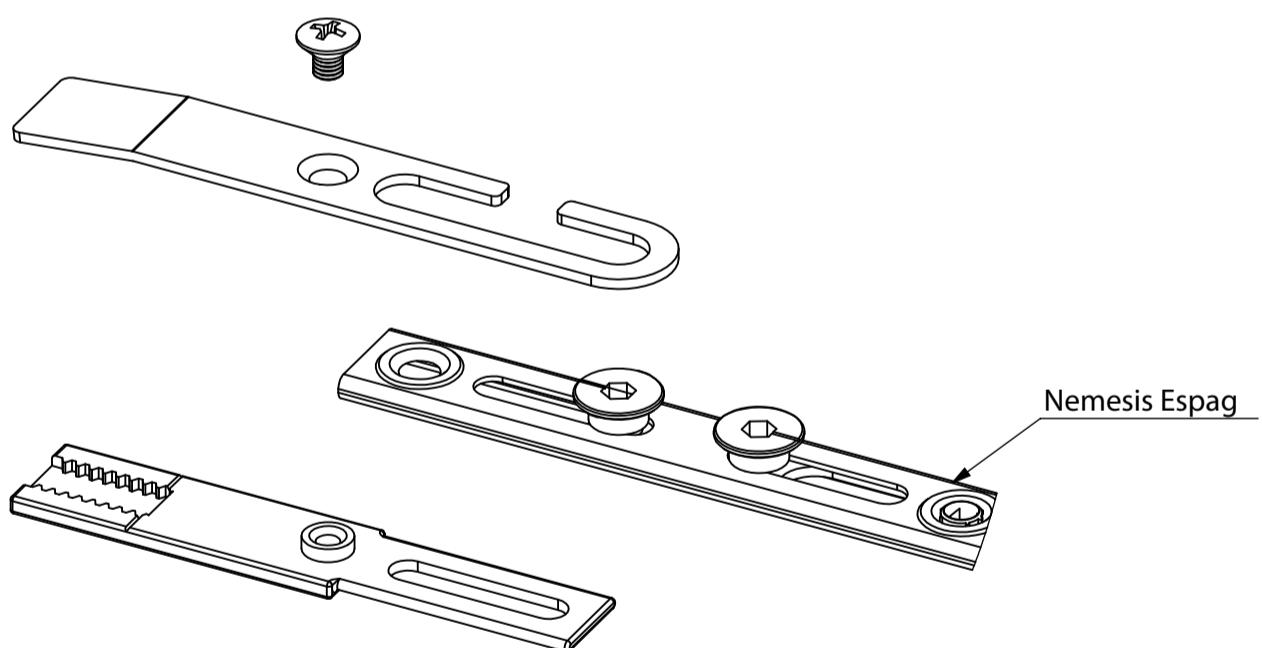

Insert connector into Nemesis channel.
Hook coverplate around outside roller.
Fix coverplate to connector with M4 Screw.
Repeat at the other end of Nemesis

When fitting to casement this screw needs to be removed and coverplate rotated clear of the connector so the corner assembly can be marked for cutting.

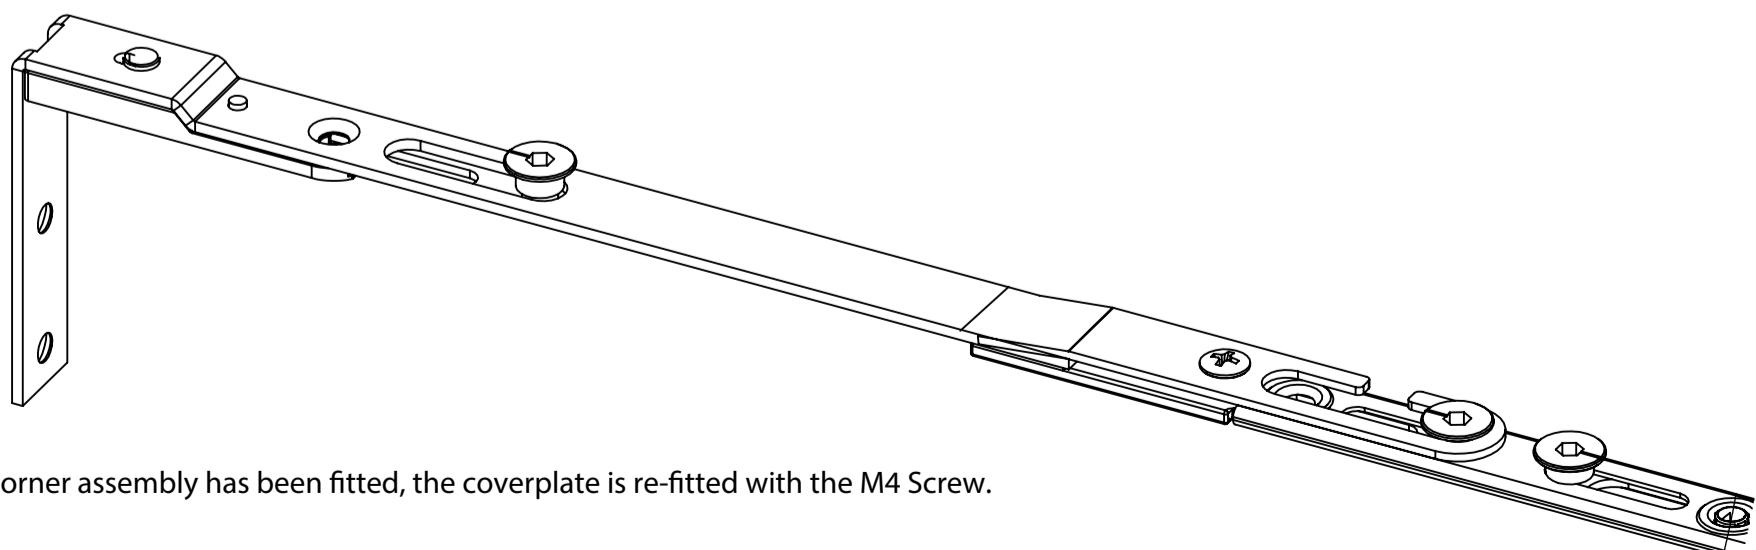

When the corner assembly has been fitted, the coverplate is re-fitted with the M4 Screw.